

More setup options in our Support Area



 
Scan the QR code or visit our website for more information
wolfvision.com/support



Network
installation



Moderation
setup



Remote admin
tools

WOLFVISION[®]
Driving Knowledge Creation




Cynap Pure


Quick Start Guide

Basic setup

1. Plug in power supply
2. Connect HDMI cable between Cynap Pure Mini and display monitor or projector
3. Optional (only for touchscreen users): Connect USB cable between Cynap Pure Mini and display monitor to use touch functionality
4. Power on the device
5. Start screen sharing

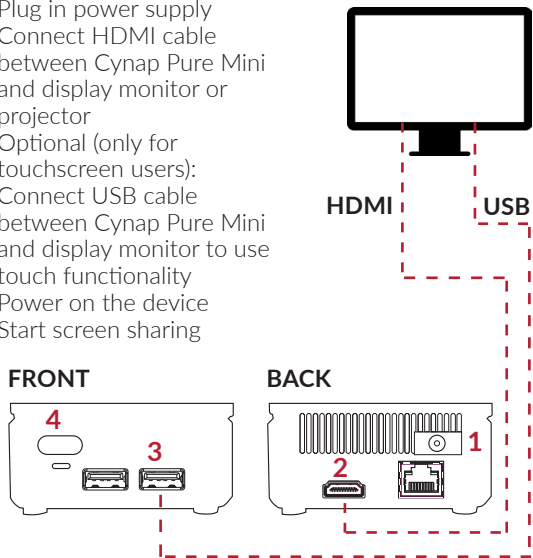

Start screen sharing

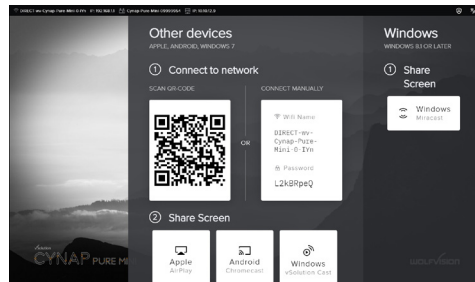

All Apple, Android and Chrome OS devices

Connect to the Cynap Pure Mini access point, either by scanning the QR code or connecting manually. Share your screen using either AirPlay, Chromecast or Miracast, depending on your device.

Windows PC

Press the keys  and  on the keyboard.