

 
On-Screen Menu Lock

No: **T-16/01**Revised 7st June 2017 / AR

Introduction

To prevent unwanted changes of the on-screen menu, activate the locking function in the on-screen Extra menu. This way, the on-screen menu cannot be entered easily.

The Visualizer can be used as usual, just when the MENU key will be pressed in LIVE mode, a warning message will be prompted in the left lower corner of the screen (HDMI & RGB out):

A screenshot of a grey rectangular box with the text "OSD menu locked" in a light grey, monospace font.

Which units are supported

All units which are based on PF-1 or similar (probably the firmware needs to be updated).

- VZ-8light-4 and VZ-8plus-4
- VZ-9.4F and VZ-9.4L
- VZ-C6
- EYE-14
- VZ-3neo and VZ-8neo
- vSolution Cam

How to Activate

Enter the on-screen EXTRA menu by press and hold the menu key until the EXTRA menu will be displayed on-screen. Use the navigation keys and set the item "OSD Lock" to "ON". Exit the menu.

Example EYE-14 with firmware v1.37a:



How to Disable

Enter the on-screen EXTRA menu by press and hold the menu key for 20 seconds until the EXTRA menu will be displayed on-screen. Use the navigation keys and set the item "OSD Lock" to "OFF". Exit the menu.

Example EYE-14 with firmware v1.37a:

